


7164 GATTI JUMPER LOCATION

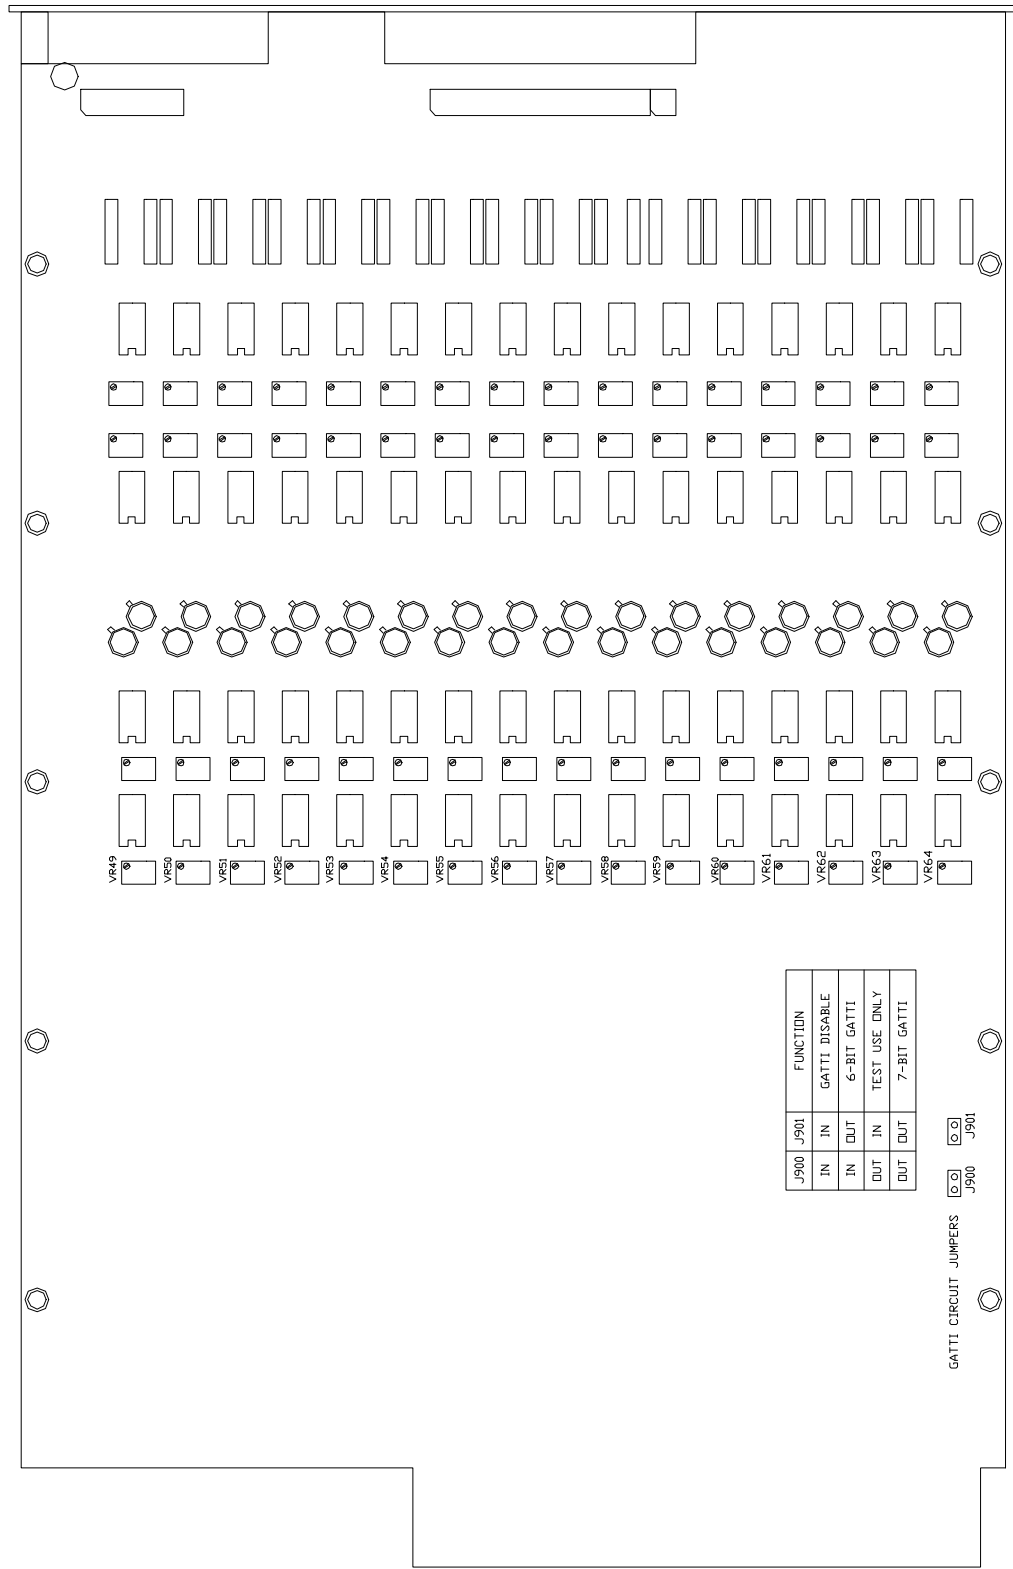


J900		J901		FUNCTION
IN	OUT	IN	OUT	GATTI DISABLE
IN	OUT	IN	OUT	6-BIT GATTI
OUT	IN	OUT	IN	TEST USE ONLY
OUT	OUT	OUT	OUT	7-BIT GATTI

GATTI CIRCUIT JUMPERS
 J900
 J901

7164 REAR JUMPER PROGRAMING

CONVERSION DELAY TIME MULTIPLIER

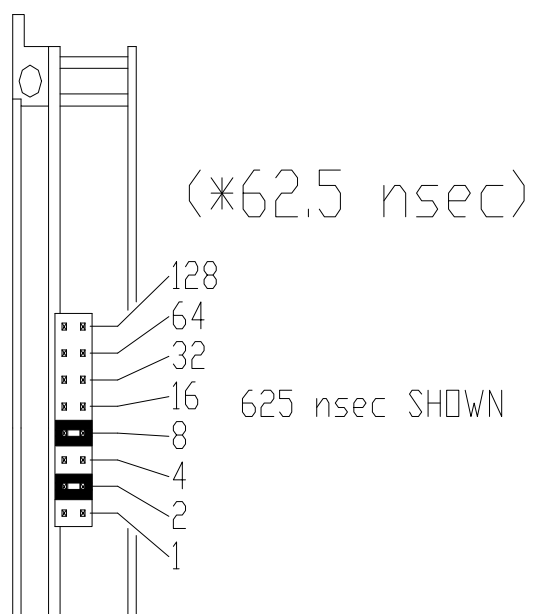

VIEWED FROM TOP REAR OF MODULE